

Changing Disposable Helium Tank

1. Do not open yoke retaining handle.



2. Lift latch lever up.



3. Angle tank upwards.



4. Unscrew tank.



5. Take cap off new tank and screw into yoke.



6. Angle tank downwards and secure latch.

